


SPITFIRE - MAIN PARTS AND FRAMES BUILDING SCHEDULE


COMPLETING THE WINGS

1) Pin the wing centre section back over the profile on the plan. Ensure it is nice and flat and that it is accurately positioned.

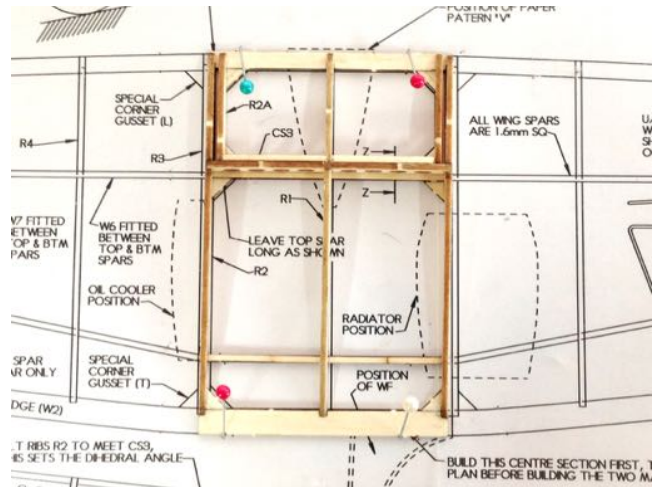


2) Take the left hand wing panel and apply glue to the end face of R3 and the mating face of the top spar extension and glue to the face of R2 on the centre section ensuring it is correctly aligned to both the centre section and the profile on the plan.

Prop up the wing tip 25mm using a match box or similar. The two pieces can be clamped together using a sprung clothes peg or gentle modeller's clamp. Just make sure that the wood is not crushed as it is clamped.

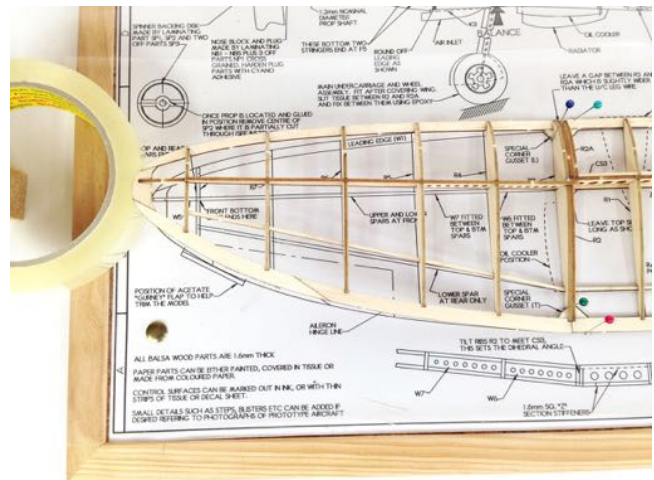

3) Repeat step 2 for the right wing panel. Leave the entire assembly to set before removing it from the building board.

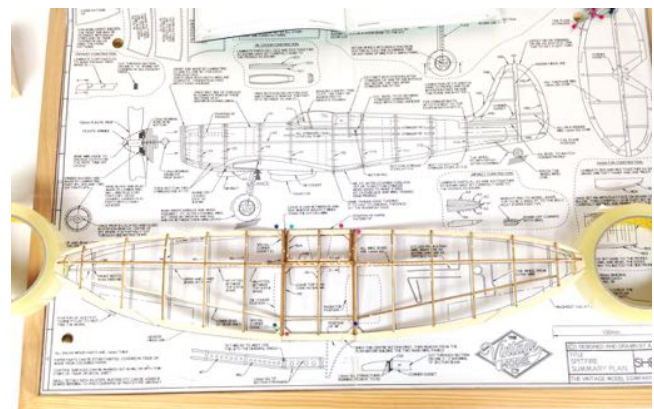

4) Round off the leading edge of the wing assembly and taper the trailing edge as shown on the plan. Carefully give the entire structure a light sanding to smooth the joints, remove lumps and bumps and the burnt edges of the laser parts.

